

bearing, universal joint -check for signs of wear			x		x		x		x		x		x	
Lower the vehicle														
Air cleaner (ACL), engine -replace	Clean the air cleaner (ACL) housing.		x		x		x		x		x		x	
Top up the engine oil		x	x	x	x	x	x	x	x	x	x	x	x	x
Program point:	year:	1	2	3	4	5	6	7	8	9	10	11	12	13
	km x 1000:	30	60	90	120	150	180	210	240	270	300	330	360	390
	miles x 1000:	18	36	54	72	90	108	126	144	162	180	198	216	234
Fluid levels - engine compartment -check and adjust brake fluid, clutch fluid, power steering fluid, washer fluid, coolant		x	x	x	x	x	x	x	x	x	x	x	x	x
Engine coolant - check/adjust the anti-freeze/corrosion protection rating		x	x	x	x	x	x	x	x	x	x	x	x	x
Battery - check: poles, electrolyte level, mounting			x		x		x		x		x		x	
Vehicles with temporary tire sealing kit - check the container with sealer fluid, replace every fourth year, see decal.														
Auxiliary unit belt, belt tensioner, idler pulley -replace according to the service program or: - replace at a maximum 10 year interval							x						x	
Timing belt belt tensioner, idler pulley -replace according to the service program							x						x	

