

suspension -check for signs of wear		x	x	x	x	x	x	x	x	x	x
Lower the car											
Air cleaner (ACL) -replace	Clean the air cleaner (ACL) housing.		x			x			x		
Spark plugs -replace			x			x			x		
Gas filter between governor and gas distributor -replace	See Replacing the gas filter	x	x	x	x	x	x	x	x	x	x
Gas filter shut-off valve -replace	See Replacing the gas filter in the shut-off valve		x				x				x
Gas pressure - check/adjust	See Setting the fuel pressure	x	x	x	x	x	x	x	x	x	x
Program point: S40/V40 gasoline engines and Bi-fuel	Year:	11	12	13	14	15	16	17	18	19	20
	Km x 1000:	220	240	260	280	300	320	340	360	380	400
	Miles x 1000:	132	144	156	168	180	192	204	216	228	240
Top up the engine oil		x	x	x	x	x	x	x	x	x	x
Automatic transmission -top up with transmission fluid			x				x				x
Fluid levels - engine compartment -check and adjust brake fluid, clutch fluid, power steering fluid, washer fluid, coolant		x	x	x	x	x	x	x	x	x	x
Engine coolant -check and adjust anti-freeze rating / anti-corrosion agent		x	x	x	x	x	x	x	x	x	x
Battery -check: pole pieces, electrolyte level, mounting		x	x	x	x	x	x	x	x	x	x
Auxiliary belt -replace the belt according to the service program or: -replace the belt at a 10	See Auxiliaries belt / belt tensioner, replacing						x				x

