

spare wheel) - check for damage, wear, tire pressure		x	x	x	x	x	x	x	x	x	x
Program point:	year:	1	2	3	4	5	6	7	8	9	10
	km x 1000:	20	40	60	80	100	120	140	160	180	200
	miles x 1000:	12,5	25	37.5	50	62,5	75	87,5	100	112.5	125
Drive shafts -check the play -check rubber bellows				x			x			x	
Brake pads, brake discs -check	Brake pads, front, check Brake pads, rear, check	x	x	x	x	x	x	x	x	x	x
Brake lines, fuel lines - check for leakage and damage				x			x			x	
Program point:	year:	1	2	3	4	5	6	7	8	9	10
	km x 1000:	20	40	60	80	100	120	140	160	180	200
	miles x 1000:	12,5	25	37.5	50	62,5	75	87,5	100	112.5	125
Front suspension, steering system - check for wear according to: Wheel angles check				x			x			x	
Rear wheel suspension - check for wear according to: Wheel angles check				x			x			x	
Lower the vehicle											
Air cleaner (ACL), engine -replace	Clean the air cleaner (ACL) housing. Change only according to km/miles interval			x			x			x	
Fuel filter -replace	Change only according to km/miles			x			x			x	

Program point:	year:	11	12	13	14	15	16	17	18	19	20
	km x 1000:	220	240	260	280	300	320	340	360	380	400
	miles x 1000:	137,5	150	162,5	175	187,5	200	212,5	225	237,5	250
Parking brake - check and adjust		x	x	x	x	x	x	x	x	x	x
External lighting -check the function		x	x	x	x	x	x	x	x	x	x
Horn - check the signal		x	x	x	x	x	x	x	x	x	x
Headlamp/fog lamp - check and align headlamps		x	x	x	x	x	x	x	x	x	x
Washer / wipers for windshields and headlamps - check the function and for signs of wear		x	x	x	x	x	x	x	x	x	x
Seat belts - check the function and for signs of wear		x	x	x	x	x	x	x	x	x	x
Program point:	year:	11	12	13	14	15	16	17	18	19	20
	km x 1000:	220	240	260	280	300	320	340	360	380	400
	miles x 1000:	137,5	150	162,5	175	187,5	200	212,5	225	237,5	250
Raise the vehicle											
Engine, transmission, transmission -check for leaks	In event of leakage from the transmission, check the oil level.	x	x	x	x	x	x	x	x	x	x
Engine oil, oil filter - change oil and oil filter		x	x	x	x	x	x	x	x	x	x
Wheels and tires (excluding spare wheel) - check for damage, wear, tire pressure		x	x	x	x	x	x	x	x	x	x
Program	year:	11	12	13	14	15	16	17	18	19	20

point:	km x 1000: miles x 1000:	220	240	260	280	300	320	340	360	380	400
		137,5	150	162,5	175	187,5	200	212,5	225	237,5	250
		Drive shafts -check the play -check rubber bellows			x			x			x
Brake pads, brake discs - check	Brake pads, front, check Brake pads, rear, check	x	x	x	x	x	x	x	x	x	x
Brake lines, fuel lines - check for leakage and damage			x			x			x		
Program point:	year:	11	12	13	14	15	16	17	18	19	20
	km x 1000:	220	240	260	280	300	320	340	360	380	400
	miles x 1000:	137,5	150	162,5	175	187,5	200	212,5	225	237,5	250
Front suspension, Control system - check for wear according to: Wheel angles check			x			x			x		
Rear wheel suspension - check for wear according to: Wheel angles check			x			x			x		
Lower the vehicle											
Air cleaner (ACL), engine -replace	Clean the air cleaner (ACL) housing. Change only according to km/miles interval		x			x			x		
Fuel filter -replace	Change only according to km/miles interval		x			x			x		
-drain off the condensation		x		x	x		x	x		x	x
Fuel filter In markets with contaminated fuel: -replace	10 000 - 20 000 km interval										
Program point:	year:	11	12	13	14	15	16	17	18	19	20
	km x 1000:	220	240	260	280	300	320	340	360	380	400
	miles x 1000:	137,5	150	162,5	175	187,5	200	212,5	225	237,5	250

	miles x 1000:	137,5	150	162,5	175	187,5	200	212,5	225	237,5	250
Fluid levels - engine compartment - check and adjust brake fluid, clutch fluid, washer fluid, coolant		x	x	x	x	x	x	x	x	x	x
Engine coolant - check /adjust the anti-freeze/corrosion protection rating		x	x	x	x	x	x	x	x	x	x
Vehicles with temporary tire sealing kit - check the container with sealer fluid, replace every fourth year, see decal.											
Accessory Drive Belt -replace the belt according to the service program or: - replace the belt at a maximum 10 year interval			x								
Program point:	year:	11	12	13	14	15	16	17	18	19	20
	km x 1000:	220	240	260	280	300	320	340	360	380	400
	miles x 1000:	137,5	150	162,5	175	187,5	200	212,5	225	237,5	250
Timing belt / belt tensioner/ idler pulley -replace according to the service program or: - replace at a maximum 10 year interval			x								
Air cleaner (ACL) passenger compartment -replace		x	x	x	x	x	x	x	x	x	x
Brake fluid -replace	Recommend that a customer with normal mileage has the fluid		x		x		x		x		x

