tel.: 61 . 830 29 04 tel.: 517 732 682





V50, 2012

Maintenance service



Program						T_		I _						
point:	year:	1	2	3	4	5	6	7	8	9	10	11	12	13
	km x 1000:	30	60	90	120	150	180	210	240	270	300	330	360	390
	miles x 1000:	18	36	54	72	90	108	126	144	162	180	198	216	234
Automatic														
transmission														
control - check the			.,		,,						.,		,,	,,
park / neutral		Х	X	X	Х	X	X	X	X	X	X	X	X	X
position (PNP)														
switch														
Parking brake														
- check and		х	х	x	х	Х	х	х	х	Х	Х	х	х	х
adjust														
External														
lighting		x	x	x	x	x	x	x	x	x	x	×	×	х
-check the function														
Horn														
- check the		x	x	x	x	x	x	x	x	x	x	x	x	x
signal		^	^	^	^	^	^	^	^	^		^	^	
Headlamp/fog														
lamp														
- check and		х	х	х	x	x	x	x	x	x	x	x	x	х
align														
headlamps														
Washer /														
wipers for														
windshields														
and Headlamps		х	х	х	×	x	x	×	×	x	x	×	×	х
- check the														
function and for														
signs of wear														
Seat belts														
- check the		,	,		,,	\ <u>,</u>	\ <u>,</u>	,,		,		,
function and for		X	X	X	X	X	X	X	X	X	Х	X	X	X
signs of wear														
Program	year:	1	2	3	4	5	6	7	8	9	10	11	12	13
point:	km x 1000:	30	60	90	120	150	180	210	240	270	300	330	360	390
	miles x	18		54	72	90	108	126	144	162	180	198	216	234
D-1 #	1000:													
Raise the vehicle														
Engine,	In event of													
transmission,	leakage from													
transmission	the													
-check for leaks	transmission,	X	X	X	Х	X	X	Х	Х	Х	Х	X	Х	X
	check the oil level.													
Engine oil,														
oil filter		x	x	x	x	x	x	x	x	x	x	x	x	x
- change oil and		^	^	^	^	^	^	^	^	^	^	^	^	^
oil filter														
Automatic	Ear vahialas													
transmission	For vehicles used as													
The oil does not	taxis or													
normally need														
normany need	primarily													

changing.	used for	l	İ	1	I	I	I	I	ſ	I	I	I	I	I
The oil must be	towing,													
changed if	replace the													
instructed in	oil .		x		×		x		x		x		×	
the text	according to													
information	the service													
display.	program.													
Wheels and														
tires														
(excluding														
spare wheel)		X	X	X	X	×	X	X	X	X	X	×	×	X
- check for														
damage, wear, tire pressure														
Program														
point:	year:	1	2	3	4	5	6	7	8	9	10	11	12	13
	km x 1000:	30	60	90	120	150	180	210	240	270	300	330	360	390
	miles x 1000:	18	36	54	72	90	108	126	144	162	180	198	216	234
Drive shafts														
-check the play			×				x		x		x		x	
-check rubber			X		X		X		X		x		*	
bellows														
Brake pads,	Brake pads,													
brake discs	front, check Brake pads, rear,	х	х	x	x	x	x	x	x	x	x	x	x	x
- check	check													
Brake and fuel														
lines and fuel														
filter			×		x		x		x		x		x	
- check for			^		^		^		^		^		^	
leakage and														
damage														
Fuel filter	Change only													
-drain off the	Change only according to	v		\ ,						\ <u>\</u>		,		,,
condensation	km/miles	Х		X		X		X		X		X		X
	interval													
-replace			х		х		х		х		Х		х	
Fuel filter														
In markets with	10 000 - 20													
contaminated	000 km													
fuel:	interval													
-replace Program														
point:	year:	1	2	3	4	5	6	7	8	9	10	11	12	13
	km x 1000: miles x	30		90	120	150	180	210	240	270	300	330	360	390
	1000:	18	36	54	72	90	108	126	144	162	180	198	216	234
Front														
suspension,														
control														
system			x		x		x		x		x		×	
- check for														
wear according to: Wheel														
angles check														
Rear wheel														
suspension														
- check for														
wear according			X		X		X		X		Х		X	
to: Wheel														
angles check														
Lower the														
vehicle				1		1	1	1	1	1	1	1	1	1
			i _		1	1	1	1	1	1				1
	Clean the air													
Air cleaner	Clean the air cleaner (ACL) housing.													

(ACL), engine -replace	Change only according to km/miles interval		x		×		x		x		x		x	
Program	year:	1	2	3	4	5	6	7	8	9	10	11	12	13
point:	km x 1000:	30	60	90	120	150	180	210	240	270	300	330	360	390
	miles x 1000:	18	36	54	72	90	108	126	144	162	180	198	216	234
Fluid levels -	1000.													
engine														
compartment - check and adjust brake fluid, clutch fluid, washer fluid,		x	x	x	x	x	x	x	x	x	x	x	x	x
coolant Engine														
coolant - check/adjust the anti- freeze/corrosion protection rating		x	x	x	x	x	x	x	x	x	x	x	x	x
Vehicles with														
temporary tire sealing kit - check the container with sealer fluid, replace every fourth year, see decal.														
Auxiliaries belts, belt tensioner -replace according to the service program or: - replace at a maximum 10 year interval							×						x	
Timing belt belt tensioner, idler pulley -replace according to the service program or: - replace at a maximum 10 year interval							x						x	
Program	year:	1	2	3	4	5	6	7	8	9	10	11	12	13
point:	km x 1000:	30	60	90	120	150	180	210	240	270	300	330	360	390
	miles x 1000:	18	36	54	72	90	108	126	144	162	180	198	216	234
Air cleaner (ACL) passenger compartment -replace	1000.	х	х	x	x	x	x	x	х	х	х	x	x	x
Roof system C70 - check	See: Service programs/838 Convertible	х	×	×	x	x	х	x	x	х	x	х	x	x

- lubrication	roof/Service roof system													
Brake fluid -replace	Recommend that a customer with normal mileage has the fluid replaced every other year.		х		x		x		x		×		×	
	The fluid must be replaced every year if the car is used for mountain driving or is mainly used in humid climates.	x	x	x	х	x	x	х	x	х	х	x	x	х
SRI - set the service reminder indicator (SRI) to zero	Resetting the service reminder indicator (SRI)	x	x	x	х	х	х	х	х	х	x	х	x	х