





the brake fluid, clutch fluid, power steering fluid, washer fluid. coolant		x	x	x	x	x	x	x	x	x	x	x	x	x
<b>Engine coolant</b> - check and adjust the antifreeze/corrosion protection rating		x	x	x	x	x	x	x	x	x	x	x	x	x
<b>Vehicles with temporary tire sealing kit</b> - check sealant container - replace every four years (see decal)														
<b>Auxiliaries belts, belt tensioner</b> -replace according to the service program or: - replace at a <b>maximum 10 year</b> interval	Only applies to B5254TX						x						x	
<b>Auxiliary unit belt, belt tensioner, idler pulley</b> -replace according to the service program or: - replace at a <b>maximum 10 year</b> interval	Applies only to B63x4x								x					
<b>Rubber connection generator</b> -replace according to the service program or: - replace at a <b>maximum 15 year</b> interval	Applies only to B63x4x See method for generator.								x					
<b>Auxiliary unit belt, belt tensioner, idler pulleys</b> -replace according to the service program or: - replace at a <b>maximum 10 year</b> interval	Only applies to B8444S								x					
<b>Program point:</b>	<b>year:</b>	<b>1</b>	<b>2</b>	<b>3</b>	<b>4</b>	<b>5</b>	<b>6</b>	<b>7</b>	<b>8</b>	<b>9</b>	<b>10</b>	<b>11</b>	<b>12</b>	<b>13</b>
	<b>km x 1000:</b>	<b>30</b>	<b>60</b>	<b>90</b>	<b>120</b>	<b>150</b>	<b>180</b>	<b>210</b>	<b>240</b>	<b>270</b>	<b>300</b>	<b>330</b>	<b>360</b>	<b>390</b>
	<b>miles x 1000:</b>	<b>18</b>	<b>36</b>	<b>54</b>	<b>72</b>	<b>90</b>	<b>108</b>	<b>126</b>	<b>144</b>	<b>162</b>	<b>180</b>	<b>198</b>	<b>216</b>	<b>234</b>
<b>Timing belt, belt tensioner, idler pulley</b> -replace according to the service program or: - replace at a	Only applies to B5254TX						x						x	

